

General	Full	Lite
Settings	x	x
Define coordinate setup	x	x
Set scale	x	x
Surfaces*	x	x
Save Surfaces	x	x
About TerraModeler	x	x
Help on TerraModeler	x	x

* details in separate table

Create Surfaces	Full	Lite		
Triangulate Survey	x	x		
Triangulate View	x	x		
Triangulate Elements	File	New	x	x
		Create by scanning	x	x
		Load	x	x
		Save as	x	x
	Rule	Add	x	x
		Edit	x	x
		Delete	x	x
Insert Random Element			x	x
Insert Breakline Element			x	x
Triangulate Multiple Sources			x	x
Rebuild Models			x	x

Display Surface	Full	Lite		
Display contours	File	Load settings	x	x
		Save settings as	x	x
	Options	Contours	x	x
		Labels	x	x
		Ticks	x	x
Display triangles			x	x
Display grid			x	x
Display elevation texts			x	x
Display slopes			x	x
Display shaded surface			x	
Update displays			x	x
Erase display			x	x
Display boundary			x	x
Label peaks and pits			x	x

Regions	Full	Lite		
Regions	Region	Create	x	
		Edit information	x	
		Move center point	x	
		Assign new boundary	x	
		Delete	x	
	View	Small dialog	x	
		Medium dialog	x	
		Large dialog	x	
		Fields	x	
		Sort by	x	
	List	Regions	x	
Create Region			x	
Delete Region			x	
Edit Region info			x	
Move region center			x	
Update regions			x	

Flood Mapping	Full	Lite		
Import River Sections			x	
Edit River Section	File	Output to Onda	x	
		Close	x	
	Section	Edit	x	
		Move xy origin	x	
		Rotate	x	
		Extend	x	
		Create from element	x	
		Set stations	x	
		Delete	x	
	Point	Edit selected	x	
		Delete selected	x	
	Sort	Increasing stations	x	
		Decreasing stations	x	
Export River Sections			x	
Input Water Elevations			x	
Draw River Section Boundaries			x	
Display Flood			x	

Surfaces	Full	Lite		
File	New surface	x	x	
	Open surface	x	x	
	Close surface	x	x	
	Close all	x	x	
	Save surface	x	x	
	Save as	x	x	
	Save all	x	x	
	Open reference	x	x	
	Import	Xyz text file	x	x
		Xyz binary file	x	x
		Lattice file	x	
		Triangles	x	x
	Export	Xyz text file	x	x
		Triangle text file	x	x
		Lattice file	x	
		Raster image	x	
		Graphical elements	x	x
	Restore from file		x	x
	User settings		x	x
	Exit		x	x
Edit	Modify settings		x	x
	Profile settings		x	x
	Exclude long triangles		x	x
	Modify elevations		x	x
	Thin		x	x
	Compress		x	x
	Add inferred points		x	x
	Delete surface		x	x
Utility	View statistics		x	x
	Copy surface		x	x
	Merge surfaces		x	x
	Subtract surfaces		x	x
	Statistical model		x	x
	Output control report		x	x
	Produce contours		x	
	Produce lattice models		x	
	Produce triangles		x	
	Lattice database	Draw boundaries	x	
		Draw contours	x	
		Import fence contents	x	
Tools	Main		x	x
	General		x	x
	Create Surfaces		x	x
	Draw using Surface		x	x
	Drawing utilities		x	x
	Edit point		x	x
	Edit area		x	x
	Display surface		x	x
	Display regions		x	
	Profiles		x	x
	Quantity		x	x
	Domains		x	
	Extensions	Flood mapping*	x	
		2D Contours*	x	x
View	Minimal dialog		x	x
	Small dialog		x	x
	Medium dialog		x	x
	Large dialog		x	x
	Fields		x	x
	Sort by	Internal ID	x	x
		Name	x	x
		Type	x	x
		File name	x	x
		Point count	x	x
Help	Contents		x	x
	About TerraModeler		x	x

2D Contours	Full	Lite
Lift 2D Contours	x	x
Set Contour Elevation	x	x
Check Linear Elevations	x	x

Draw Using Surface	Full	Lite
View Elevation	x	x
Compare elevations	x	x
View Slopes	x	x
Drop element on surface	x	x
Calculate slope	x	x
Fill area with cells	x	x

Drawing Utilities	Full	Lite
Measure slope	x	x
Label elevation	x	x
Label area	x	x
Place sloped line	x	x
Force downstream flow	x	x
Set linear elevation	x	x
Thin linear element	x	x
Densify linear element	x	x
Connect linear elements	x	x
Copy linear element	x	x
Alignment offset	x	x
Validate linear elements	x	x
Fix touching elements	x	x
Read piles from file	x	x

Edit Point	Full	Lite
Construct breakline	x	x
Insert point along breakline	x	x
Insert point	x	x
Move point	x	x
Remove point	x	x
Exclude triangles	x	x

Edit Area	Full	Lite
Flatten area	x	x
Move area	x	x
Drop area	x	x
Exclude area	x	x
Insert hole element	x	x
Remove area	x	x

Display Regions	Full	Lite
Display drainage	x	
Display themes	x	
Display region triangles	x	
Display raster triangles	x	

Profiles	Full	Lite
Draw section view	x	x
Draw profile	x	x
Draw alignment sections	x	x
Update profile	x	x
Set up automatic sections	x	x
Project into profile	x	x
Project from profile	x	x
Label profile elevations	x	x
Output profile elevations	x	
Output section elevations	x	

Quantity	Full	Lite
Compute quantity	x	x
Compute prismatic quantity	x	
Compute alignment quantity	x	
Define section templates	x	
Compute section quantity	x	
Compute tunnel volume	x	
Draw surface intersection	x	x
Compute area	x	

Domains	Full	Lite
Define domains	x	
Domain view	x	
Set area domain	x	
Set domain between lines	x	
Set triangle domain	x	
Display domain triangles	x	

Display Single	Full	Lite
Place Contour	x	
Place elevation text	x	
Place slope arrow	x	
Modify contour symbology	x	